 

For Proper Foil Installation: Make sure that the top of the foil's mast makes full contact with the bottom of the board's foil box. This full contact gives maximum support to the foil and sets the mast firmly at the recommended angle.



Tail Wing Angle Settings: Six angle spacers are supplied: $-2^{\circ}/-1.5^{\circ}/-1^{\circ}/-0.5^{\circ}/0^{\circ}/+1^{\circ}$. It is recommended to start with the 0° spacer. The tail wing angle can be reduced by up to 2° by using the -2° spacer, giving more speed and control in strong winds,

or increase by up to 1° by using the +1° spacer, for more power in light winds.



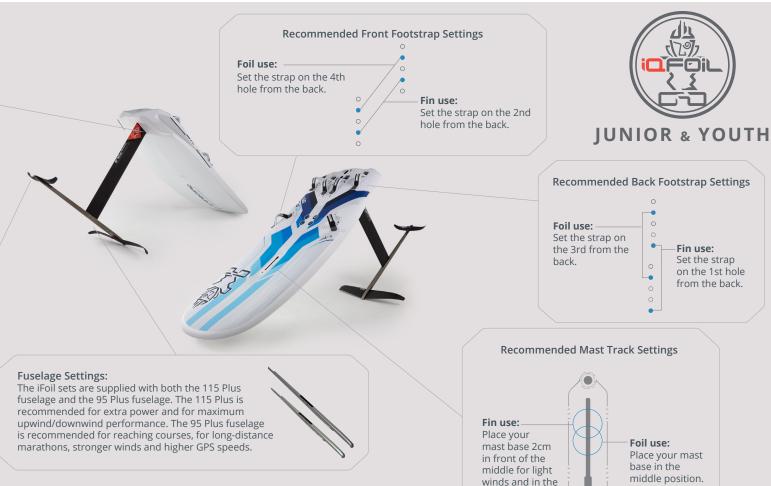

middle position

for strong winds.

